






S7280

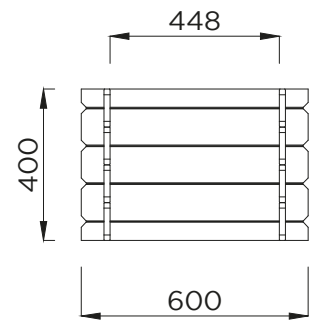

**vyvýšený záhon LANITPLAST POTTING10**  
návod na montáž / összeszerelési útmutató / instrukcje montażu

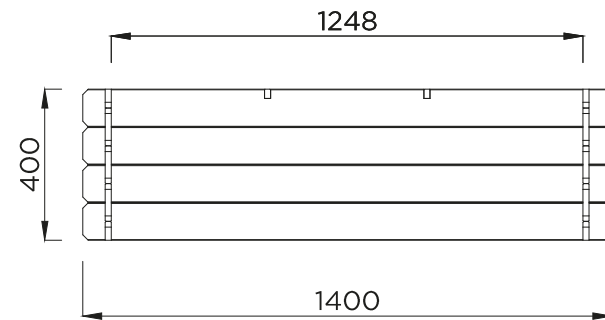

16 mm









196 L



Obsah dodávky / obsah dodávky / A szállítás köre / Zakres dostawy

S7280

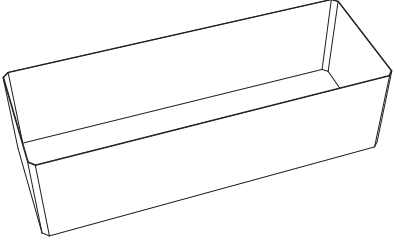
	Ref.	Index	#	# nok
	A	S7280-A	0600	4
	B	S7280-B	1400	6
	C	S7280-C	0600	6
	D	S7280-D	1400	2
	E	S7280-E		1
	F	S7280-F	0480	2

# S7280




A = 4  
B = 6  
C = 6  
D = 2

1

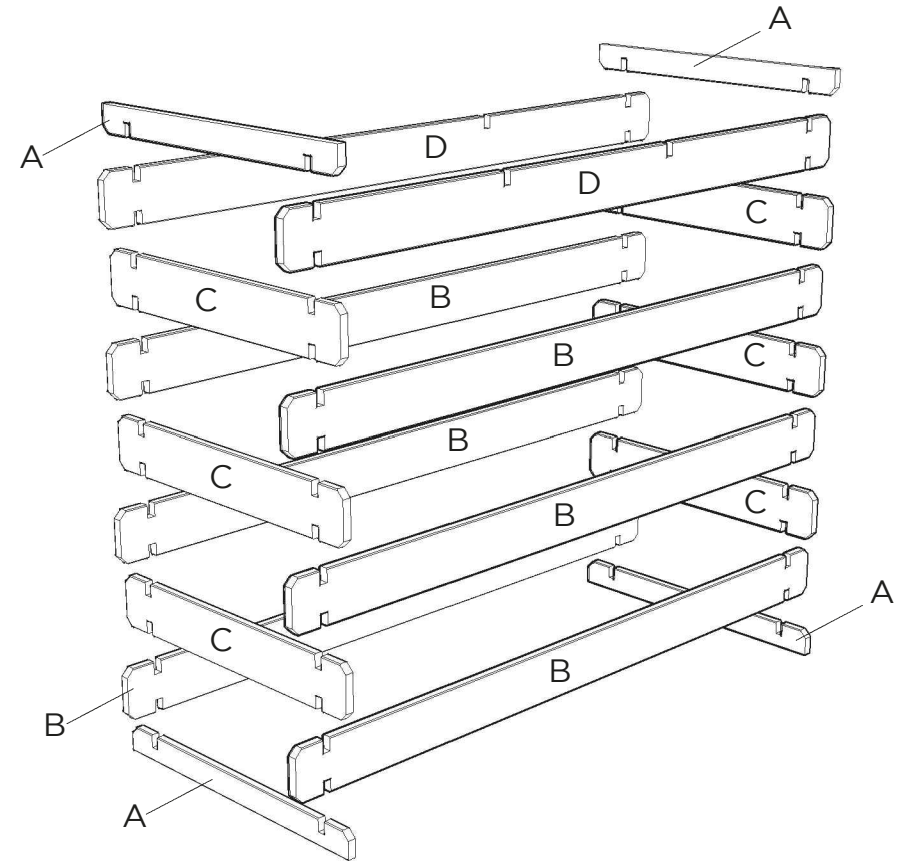

E = 1


2

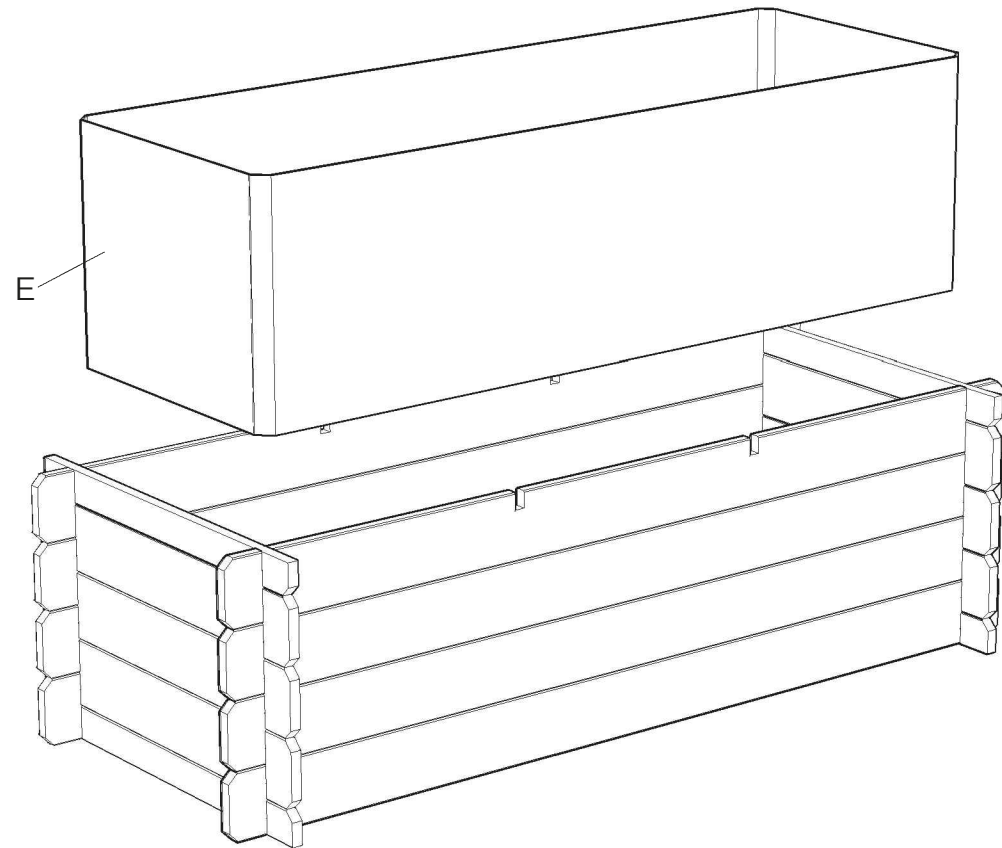

# S7280

F = 2

3

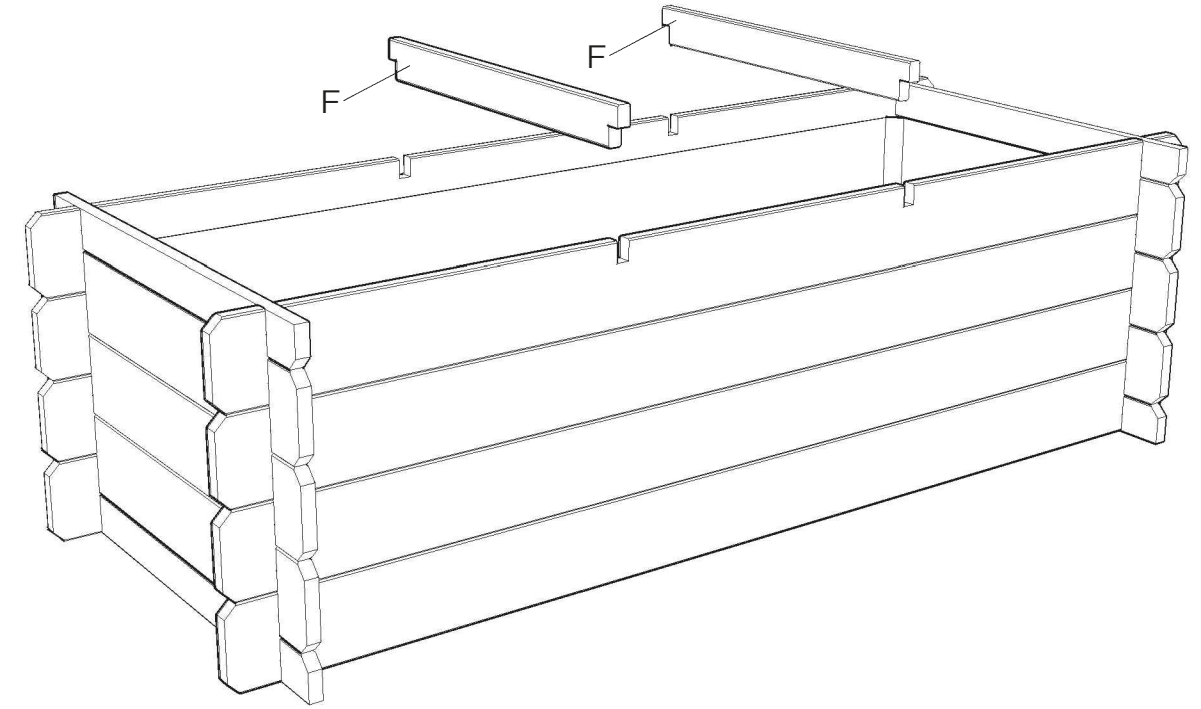

4

